



STORING PERSONAL SPEED DIALS USER GUIDE

FOR PANASONIC KX-T76XX & KX-DT3XX SERIES HANDSETS

STORING PERSONAL SPEED DIALS

LIFT HANDSET

DIAL *30 + PERSONAL SPEED DIAL (00-99)

DIAL 9 + TELEPHONE NUMBER THEN #

You can store 100 personal speed dials on each handset.

USING PERSONAL SPEED DIALS

LIFT HANDSET

PRESS AUTO DIAL OR **

DIAL * + PERSONAL SPEED DIAL (00-99)

TO EDIT THE NAMES AND NUMBERS OF SPEED DIALS

PRESS PROGRAM

ENTER 10 THEN PRESS ENTER OR PRESS STORE BUTON

ENTER PERSONAL SPEED DIAL LOCATION NUMBER (2 DIGITS)

TO ERASE NUMBER – PRESS LEFT OR RIGHT ON JOG DIAL WHEEL, ENTER A NUMBER, PRESS ENTER OR STORE

TO INSERT A NUMBER OR CHARACTER – PRESS LEFT OR RIGHT ON JOG DIAL WHEEL, ENTER A NUMBER OF CHARACTER, PRESS ENTER OR STORE